



Speedi-Spreader Installation Instructions.

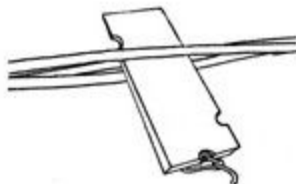

Step 1.)

Insert the wedge between the two "Hot" legs and above the neutral

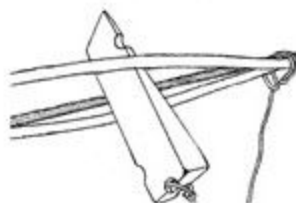


Step 2.)

Twist the wedge 90 degrees so that the notch, at the thin end, is facing up.
NOTE: Try to keep it as perpendicular as possible, for stability.



Step 3.)

Draw the wedge toward you until the top wire drops into the top notch.

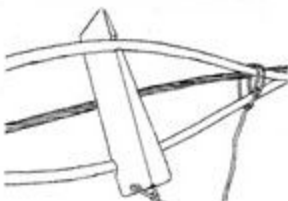

Step 4.)

Pull the bottom "Hot" leg towards you with one hand, while pushing the wedge away from you with the other. When the bottom wire "pops" into the bottom notch you are ready to permanently install a Midspan Spreader .

For more information go to Birt Industries, LLC at www.speedi-spreader.com